

normal wear and tear, repairs carried out by unauthorised persons or involving use of non-genuine RoboSol parts and Aerosol Cans.

This warranty in no way affects your rights under statutory law. Our liability shall not exceed the cost of the replacement Dispenser and in no case shall be held liable for any consequential loss or damage or negligence resulting from the use of the Dispenser or Aerosol Cans. Our liability for failing to perform the warranty obligations is similarly limited. The warranty does not include battery life. If faults develop please return immediately to your supplier or directly to us.

**PLEASE REGISTER YOUR WARRANTY DETAILS ON
THE ROBOSOL WEBSITE: www.robosol.co.za**

Please contact us with any questions you may have concerning the use of RoboSol or should you experience difficulty in obtaining additional Dispensers and/or replacement Aerosols from your local supplier or for trouble shooting assistance or for more information please visit our website www.robosol.co.za or email: evan@robosol.co.za or contact:

Mantelle Marketing Pty Ltd T/A RoboSol®

12 Mountbatten Ave, Pinelands,

Cape Town, South Africa. 7405

TEL : +27 21 531 0712

FAX : +27 86 662 3662

E-mail: evan@robosol.co.za

Website: www.robosol.co.za



Automatic Insect Control System

OPERATING INSTRUCTIONS

**Please read these instructions thoroughly
before installing your Dispenser
and then keep them for future reference.**



- A. Timing Switch
- B. DAY/NIGHT/24HOUR
- C. LED Light
- D. Light Sensor
- E. Valve Hammer
- F. ON/OFF Switch (ON is up)
- G. Button to open Dispenser
- H. Battery Compartment for 2 X AA Batteries

USING FOR THE FIRST TIME

Choose a central location where air currents are likely to circulate and preferably close to the area where insect pests are most prevalent. You may need to test more than one location. Avoid areas with major through drafts.

SHELF PLACEMENT OR WALL-HANGING

Place the Dispenser on a high shelf, cupboard or mount to the wall. Position no closer than 30cm below the ceiling or 2 metres above the floor. For wall-hanging use the screws and plugs provided. Avoid installation over furniture, plastic and

polished surfaces. Ideally choose a position where the mist will be carried by light circulating air flow.

INSTALLING BATTERIES (NOT SUPPLIED)

Open the front cover by pushing down the Button (G) on the side of the Dispenser. Insert 2 X 'AA' size batteries into the Battery Compartment (H). The flat negative (-) battery end to sit against the spring. Ensure both batteries have a good charge and are fitted correctly.

INSERTING AEROSOL CAN

The RoboSol Aerosol Can rim fits over the top of the metal bracket. When loading the Aerosol, push the Valve Hammer (E) upwards to make room for the aerosol valve. When removing Aerosol Can wipe off residue from the front of the Dispenser before installing new Aerosol Can. (Use methylated spirits if necessary.)

SELECTING TIMING OPTION

Using the Timing Switch (A) you can select from four spray interval times, namely: 5, 10, 15 or 30 minutes. We recommend you start with 5-minute intervals and then adjust up until you reach the ideal time interval suitable for your environment.

OPERATION MODE SET

The Light Sensor switch (B) will allow you to choose between DAY, NIGHT or 24-HOUR operation. 'DAY' means the Dispenser will operate when there is light. '24H' means it will operate day and night. 'NIGHT' means it will operate only when it is dark.

SWITCHING ON

The ON/OFF Switch (F) is the black switch

positioned on the top inside of the Dispenser to the right. To turn your Dispenser on move the switch up.

LED INDICATOR

The red LED (C) will flash every 4 seconds to indicate that the Dispenser is working normally.

PRECAUTIONS

Keep out of reach of children. Keep well clear of fire or open flame, heat and direct sunlight. This Dispenser is not waterproof, keep away from wet and damp areas. Move fish tanks away from the immediate area. Always replace with fully charged, preferably alkaline, batteries and never leave dead batteries in the unit.

TROUBLE SHOOTING

If you experience trouble with your Dispenser unit try the following:

- Ensure unit is switched on.
- Ensure fully charged batteries are installed and polarities are correct.
- If the unit is not spraying during daylight or night hours, check that the 24H/NIGHT/DAY switch is set on the correct setting and the light sensor is not covered.

ONE YEAR WARRANTY

Your RoboSol 'Naturally Better' Automatic Aerosol Dispenser must be maintained according to these instructions.

The RoboSol Dispenser is covered for 1 year from date of purchase. Warranty covers free repair or replacement of the Dispenser due to any defects in materials or workmanship. Not covered under the warranty are deliberate misuse, breakage,